



Campainhas
Campanas
Bells



linea
BERTOMANI®
DECO SINCE 1946





CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A
53  **8310EL.46-011** 0083532089385  3 x1



CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A B
32 62  **8304EL.46-011** 0083532094303  3 x1





CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A
50  **4018EL.2-003** 0083532087503  3 x1





CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A
54  **8310EL.99-011** 0083532024034  1 x1



CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A B
32 62  **8304EL.99-011** 0083532024126  3 x1





CAMPAINHA
CAMPANA
BELL PUSHBUTTON

 **932EL.2-003** 0083532065990  1 x1





CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A B
72 85  **807EL.2-003** 0083532085325  1 x1




CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A B
29 69  **19EL.1-003** 0083532052945  1 x1



CAMPAINHA
CAMPANA
BELL PUSHBUTTON

A
20  **10.37-002** 0083532001974  5 x1